

INSTRUCTIONS

-J02411

REV. 12-13-01

Kit Numbers 69303-02, 69304-02, 69309-02 and 69315-02

CLEAR/SMOKED BULLET STYLE OR VRSC TURN SIGNAL LENS KITS

General

Kit Numbers 69303-02 and **69304-02** are designed for installation on 2000 and later Harley-Davidson Motorcycles equipped with "bullet" style turns signals (except VRSC).

Kit Numbers 69309-02 and 69315-02 are designed for installation on 2002 and later VRSC (V-Rod) Model Motorcycles.

See Service Parts Illustration for kit contents.

Installation

NOTE

A Service Manual for your motorcycle is available from your Harley-Davidson Dealer.

- See Figure 1. Locate the removal notch on the turn signal lens and carefully pry from housing. Discard lens. Repeat for remaining lenses.
- 2. Remove bulbs from turn signal assemblies.
- Obtain new amber bulbs from kit. Install the bulbs marked 1157A (Dual Filament) to the front turn signal assemblies.

Install the bulbs marked *1156* (Single Filament) to the rear turn signal assemblies.

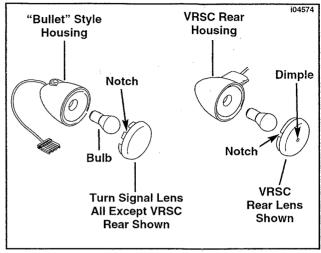


Figure 1. "Bullet" and VRSC Turn Signal Lenses

NOTE

See Figure 1. VRSC (V-Rod) Models have unique rear turn signal lenses. The rear lens is identified with a dimple mark in the center of lens. The front has no dimple.

 Obtain new lens from kit and install by snapping into place. Check turn signals for proper operation.

